


USER'S MANUAL R9702

DIAGRAM & FUNCTION INDICATION

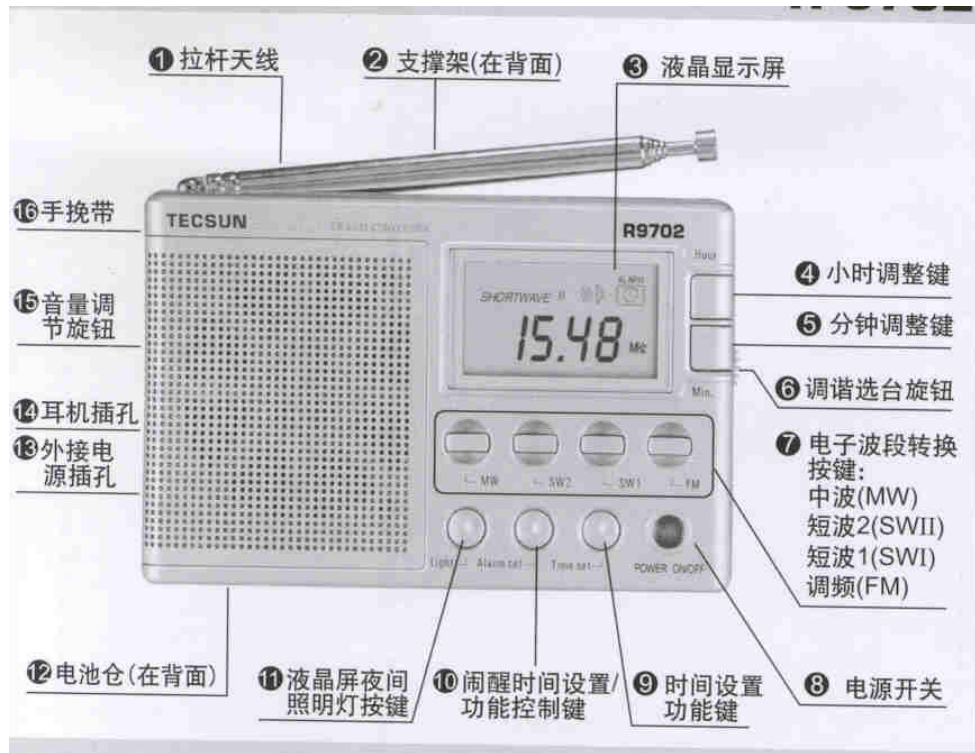

- | | |
|---------------------------|-------------------------|
| 1. Antenna | 9. Time Set |
| 2. Supporting Rack | 10. Alarm Set |
| 3. LCD Display | 11. Light |
| 4. Hour | 12. Battery Compartment |
| 5. Min | 13. D.C. Jack |
| 6. Tuning Switch | 14. Earphone Jack |
| 7. Band Selection Buttons | 15. Volume Control |
| 8. Power ON/OFF | 16. Hand Strap |

TIME SET

1. Under the off mode, keep the Time Set button (9) pressed, at the same time press the Hour button (4) to adjust hour, Min button (5) to adjust minute.

ALARM SET

1. Under the off mode , keep and AL. SET ON/OFF button (10) pressed. Press the Hour button (4) to adjust hour and press the Min button (5) to adjust the minute.
2. The clock will beep at the preset time.

ANTENNA

1. The radio receives MW by using the internal magnetic antenna. You can get the best reception by rotating the direction of the radio.
2. When you receive FM station, please pull out the telescopic antenna to get the best reception by changing its length and angle.
3. When you receive SW station, please pull out the telescopic antenna and keep it vertical to get better reception. You may use the external wiring antenna for even better reception.

TECHNICAL INDEX

1. Frequency Range :
 - FM 87-108 MHz
 - AM 525 - 1610 KHz
 - SW1 5.90 – 9.90 MHz
 - SW2 11.60 – 17.90 MHz
2. S.W Meter Band
 - 49m 5.90-6.30MHz
 - 41m 7.00-7.40MHz
 - 31m 9.50-9.90MHz
 - 25m 11.65-12.10MHz
 - 22m 13.50 – 13.90 MHz
 - 19m 15.10-15.60MHz
 - 16m 17.60-18.00MHz
 - 1st IF : 10.7 MHz
 - 2nd IF : 455 KHz
3. Noise Limit Sensitivity
 - FM \leq 10uV
 - AM \leq 1mv/m
 - SW \leq 30uV
4. Single Signal Selectivity \geq 20dB
5. Power : DC 3V or 2 x AA batteries
6. Speaker : 57mm/16ohm/0.25W

7. Unit Size : 117 x 77 x 30 mm
8. Weight : 180g (without battery)

www.tecsunradio.com

hch@cantonmade.com